

Transfer function from PTM actuator to PTM sensor

